

## Split Systems:

The "interior" heat exchanger can be located outside, using ducting to move hot air to the inside space, or it can be located inside, in a separate "split" unit that uses refrigerant to move heat between the two heat exchangers.